



3-Sided Arcade Machine

HOW TO USE IT — QUICK GUIDE



GAME ON!

1

Power on — then be patient

Switch the machine on and let it boot up. It takes around 5 minutes — just enough time to grab a drink and talk some trash.



2

Browse the games

From the main menu, use the Player 1 joystick. Up / down moves through games one at a time; left / right jumps ten at a time.

3

Pick one & play

Highlight the game you want and press P1 to load it. Winner stays on!

Good to know



ADD CREDITS

When a game has loaded, press the BLACK button to add credits.

EXIT A GAME

Press and hold P1 until you're returned to the main menu.

COCKTAIL MODE

From the main menu, press and hold the plain WHITE button next to Player 1 to switch to cocktail (vertical) mode. Press again to switch back. Only works from the main menu.



Powering off? Exit to the main menu first

Make sure you're on the main menu — not in a game — then switch off the power at the back of the unit.



Crowd favourites *...and hundreds more in the menu*



Space Invaders

Pac-Man

Dig Dug

Galaga

Elevator Action

Donkey Kong

Frogger

Street Fighter II

Centipede

Asteroids